

# MEET YOUR NEW COPILOT. DriveID



①

## ACTIVATE

DriveID™

Visit [www.cellcontrol.com](http://www.cellcontrol.com) and click the **Activate** button in the upper right hand corner of the menu bar.

Follow the on-screen prompts and enter the activation code, **located on the bottom of the DriveID™ device.**



②

## CUSTOMIZE

Policy

**Upon activation and creation of your Cellcontrol Account, a default mobile device/phone policy will be applied.**

However, DriveID™ can be customized to allow or disallow specific activity on any participating device. Simply visit [www.cellcontrol.com](http://www.cellcontrol.com), click the Login button in the upper right hand corner of the menu bar, to access your Cellcontrol Management Console.

Policy changes **do not** require end user acceptance and are updated within an hour of saving.



③

## INSTALL

Phone App

The revolutionary Cellcontrol™ app allows your DriveID™ device to block and manage your phone. It's compatible with Apple, Android, and Blackberry. For a complete list of supported platforms, visit [www.cellcontrol.com/phonesupport](http://www.cellcontrol.com/phonesupport)

See reverse for specific installation information.



④

## APPLY

Device

**Installation is quick, easy and requires zero tools.**

The DriveID™ device fastens securely to the windshield of your car, behind the rear view mirror.

See reverse for detailed instructions.



⑤

## DRIVE

Smart

**By default, DriveID blocks unapproved mobile activity throughout the vehicle; the phone will display a blocking screen when the vehicle is in motion.** However, your policy can be customized to only block usage in the driver's seat zone. This feature can be set in your online Cellcontrol Management Console.

### Tamper Resistant

Reliable technology for an enforceable solution

### Solar Powered

DriveID™ is always on and is always charging

### Non-pairing Bluetooth

Connects easily and effortlessly

### Emergency Ready

Emergency Call and Dial-back is always on

## APP INSTALLATION

Installation of the Cellcontrol™ app is necessary for DriveID™ to work properly.



### iPhone

If you don't receive a text or email with a link to download the Cellcontrol app, visit the Apple App Store and search

Open the App and touch "Login". Enter your username, password and Device ID (10 digit phone number) from Step 1 and touch "Save".

**When prompted, be sure to choose "allow" on all requested permissions. Please see the online FAQ for more information on requested permissions.**



**Follow the steps to the right to install DriveID in your vehicle. Then proceed to the steps below to complete installation.**

1. Once prompted by the application to pair your device, open the Cellcontrol application and wait for a pairing prompt.
2. You will be prompted with a pairing request from the Bluetooth signal "00A050XXXXXXXXXXXXX"
3. Just click pair and the pairing is done.



### Android

If you do not receive a text or email with a link to download the Cellcontrol app, visit the Android Marketplace on your phone and search for Cellcontrol.

Once downloaded, open the application and you should automatically be logged in.

## APPLYING THE DEVICE

Correct installation of the DriveID device is required for proper operation.




### REMOVE RED BACKING



Remove the red backing from the mounting tape on all four corners. Try to keep mounting tape clean and do not set DriveID™ device with exposed tape down.



### AFFIX TO WINDSHIELD

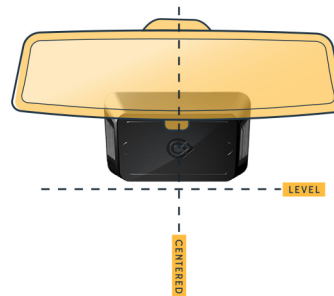

Affix the DriveID™ device to the vehicle windshield directly behind the rear view mirror. **Before making contact, ensure the device is centered, level and the USB port is facing down.**



### PULL THE TAB



Pull the tab to remove the battery protection. Your DriveID™ device is now enabled.

### End User License Agreement

<http://www.cellcontrol.com/eula/>

### Privacy Policy

<http://www.cellcontrol.com/privacy-policy>

### Supported Platforms

Apple iPhone, Android, BlackBerry.  
For a complete list of supported platforms, visit <http://www.cellcontrol.com/phonesupport>

### Limited Warranty

<http://www.cellcontrol.com/limitedwarranty>

obdEdge, LLC (Cellcontrol) warrants this product to be free from defects in material and workmanship for a period of 1-Year commencing upon the date of purchase (with proof of purchase). This obdEdge product is sold with the understanding that the purchaser has independently determined the suitability of this product. This Warranty is offered to the original purchaser of this product only. This warranty does not cover the product if physically damaged, subject to negligence or misuse, abuse, alteration, accident, or an act of GOD. This warranty does not apply to product that has water or physically damaged by accident or which has been misused, disassembled or altered. The original dated sales slip or proof of purchase will establish warranty eligibility.

**For warranty claims, contact Tech Support at [support@cellcontrol.com](mailto:support@cellcontrol.com) or 888-896-9753.**

If the product should prove defective within the warranty period, return the product with proof of purchase to obdEdge, LLC. obdEdge, at its option, will replace or repair the product free of charge and return the product postage paid. In no event shall obdEdge, LLC be responsible for claims beyond the replacement value of the defective product or in any way shall be liable or responsible for consequential or incidental damages. No express warranties and no implied warranties, whether for fitness or any particular use or otherwise, except as set forth above (which is made expressly in lieu of all other warranties) shall apply to products sold by obdEdge. obdEdge, LLC cannot be held responsible for discrepancies/inconsistencies that may occur due to automotive manufacturing changes or options.